


Wiring plan i.SED – V12

Offers special solutions when installing Kellermann indicators.

Wiring plan when indicators with a higher power input (Watt) then original are installed.*

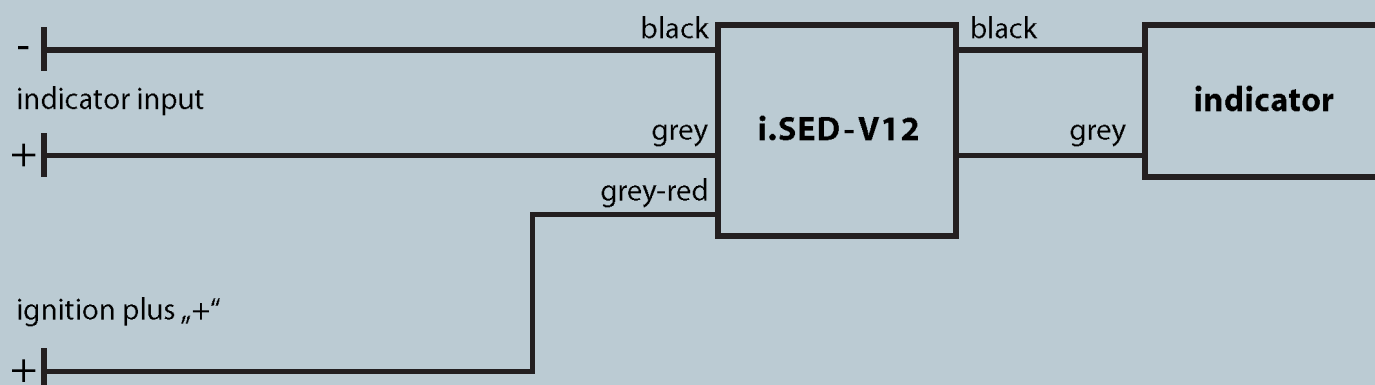


* Suitable for vehicles with original 12 Volt indicator voltage.

One set for two indicators needed.

Wiring plan i.SED - V12

Offers special solutions when installing Kellermann indicators.
Wiring plan for installing indicators with plus to ground.*

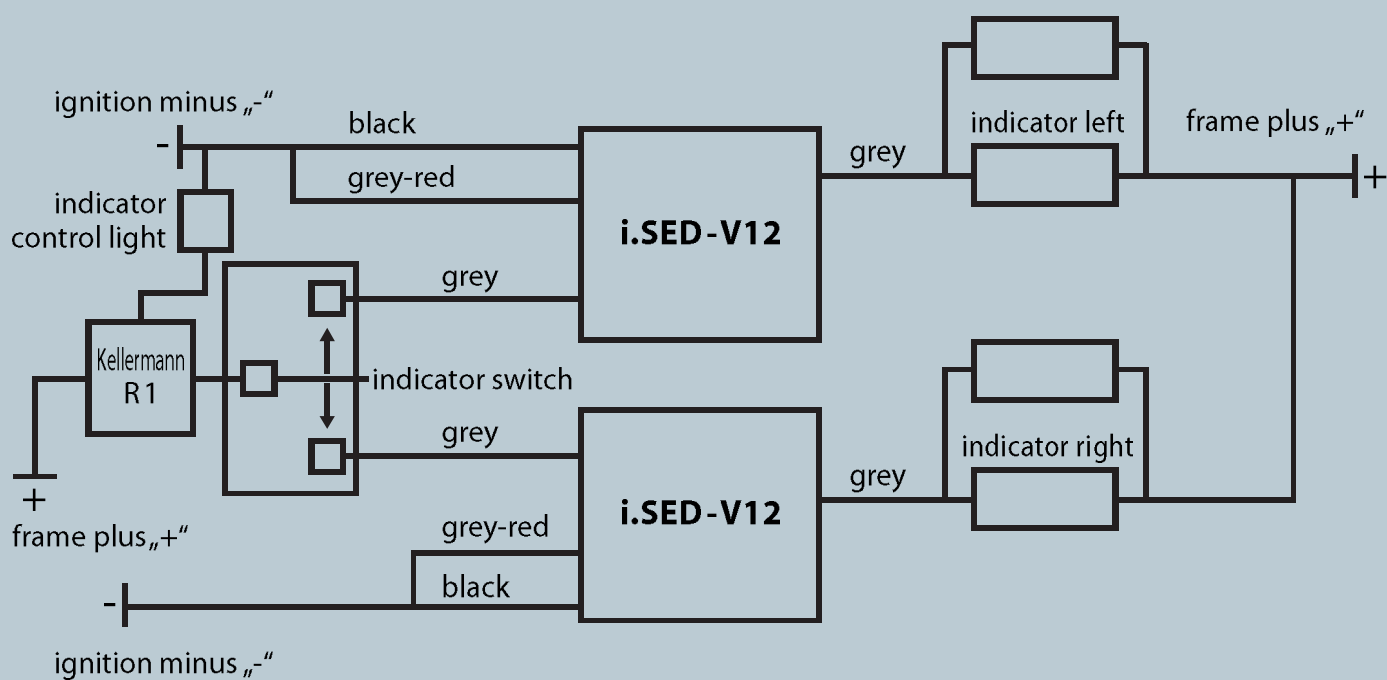


* Suitable for vehicles with original 12 Volt indicator voltage.

One set for two indicators needed.

Wiring plan i.SED – V12

Offers special solutions when installing Kellermann indicators.

Wiring plan when DF combinations (indicator, rear light, break light) are installed on vehicles with indicators connected to minus. *

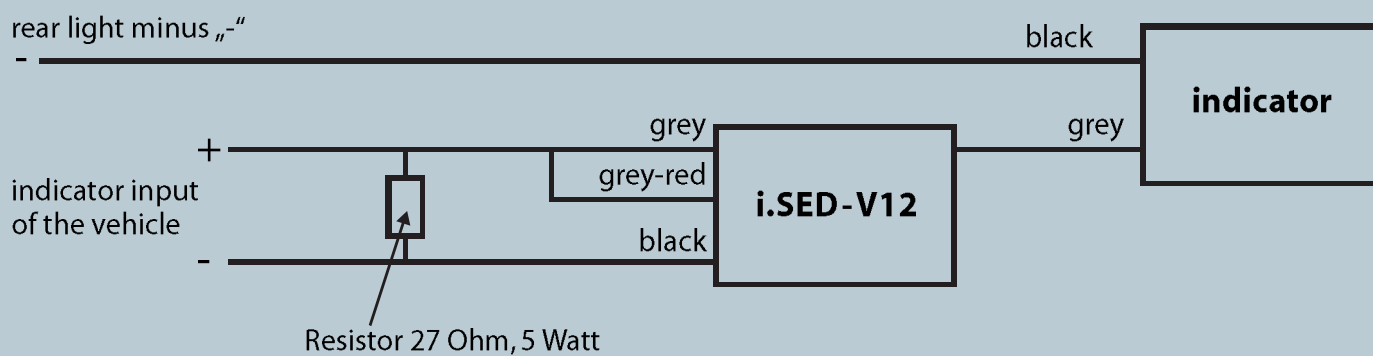

* Suitable for vehicles with original 12 Volt indicator voltage.

For 2 DF indicators (indicator, rear light, break light) one set is needed.