


Wiring plan i.SED - V6

Offers special solutions when installing Kellermann indicators.

Wiring plan when indicators with a higher power input (Watt) than original are installed. *

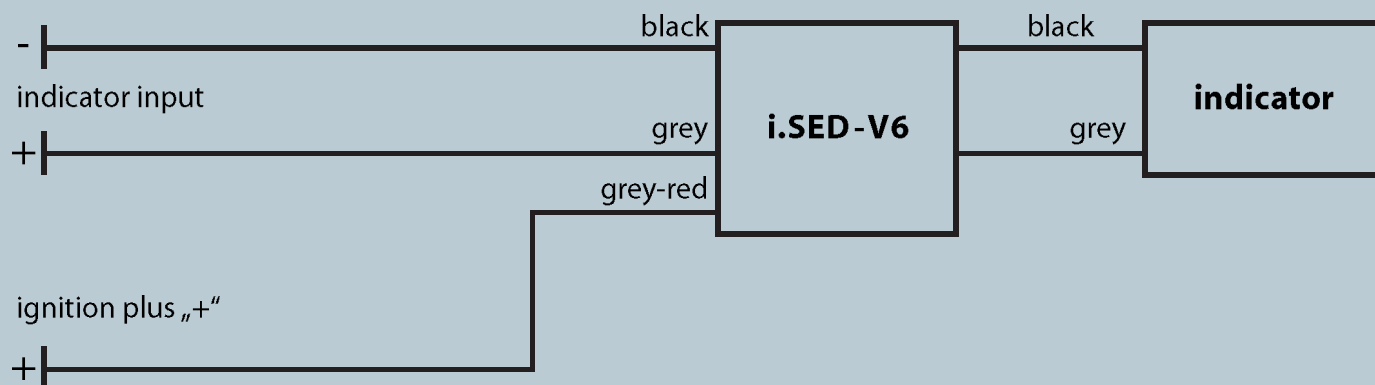


* Suitable for vehicles with original 5-9 Volt indicator voltage.

For 2 indicators one set is needed.

Wiring plan i.SED - V6

Offers special solutions when installing Kellermann indicators.
Wiring plan for installing indicators with plus to ground. *

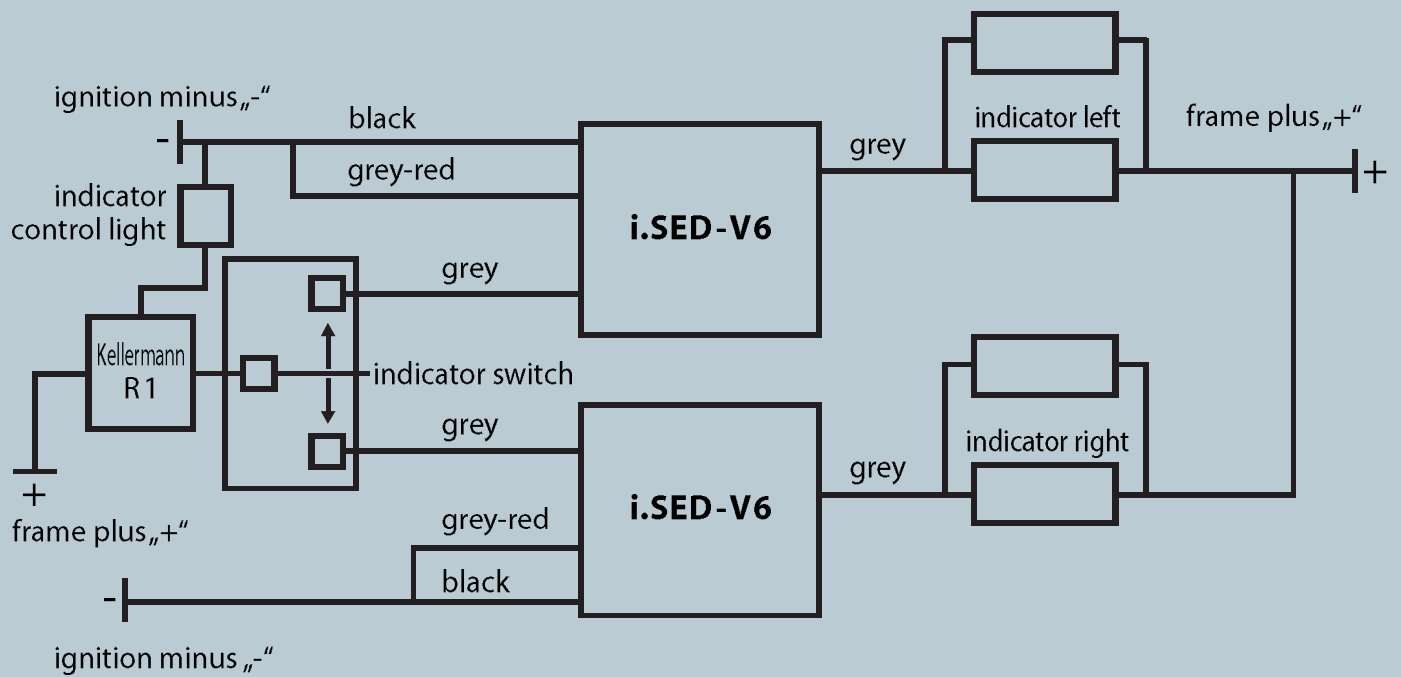

* Suitable for vehicles with original 5-9 Volt indicator voltage.

For 2 indicators one set is needed.